

CRP PANEL NOVOS 7 Casambi

Room operating unit Casambi

thermokon[®]
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alteration
Issue date: 03.04.2024 • A140

novos
CASAMBI



» APPLICATION

Room control unit with Casambi radio interface for intuitive lighting control of Casambi ecosystem participants with up to three integrated sensors for recording room temperature, humidity and CO2. Scenes are started or luminaires are switched via a 3.5" display with rotary pushbutton. The simple configuration via the Casambi app enables device-specific settings or the configuration of scenes and lighting functions with Casambi radio.

» TYPES AVAILABLE

Room operating unit temperature + optional humidity, CO2

- CRP PANEL NOVOS 7 Temp Casambi
- CRP PANEL NOVOS 7 CO2 Temp_rH Casambi

» SECURITY ADVICE – CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity

The declaration of conformity of the products are available on our website
<https://www.thermokon.de/direct/en-gb/categories/novos-7>

» NOTES ON DISPOSAL



The crossed-out wheeled bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: www.thermokon.com

» MOUNTING ADVISE ROOM SENSORS

The Accuracy of the room sensors are influenced by the technical specifications as well as the positioning and the installation type.

During Assembly:

- Seal mounting box (if present).
- Installation type, air draught, heat source, radiation heat or direct sunlight can affect the measurement.
- Bulding material specific properties of the installation place (*brick-, concrete-, partition wall, cavity wall, ...*) can affect the measurement.

Assembly not recommendet in...

- Air draught (e.g.: close to windows / doors / fans ...)
- Near heating sources,
- Direct sunlight
- Niches / between furniture / ...

» BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ($\pm 0,2$ V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =. At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» APPLICATION NOTICE FOR HUMIDITY SENSORS

At regular environmental condition, it is recommended to calibrate the sensor annually to check the compliance with the accuracy required in the application. The following conditions can damage the sensor element or lead in long term to loss of the specified accuracy:

- Mechanical stress
- Contamination (e.g. dust / fingerprints)
- Aggressive chemicals
- Ambient conditions (e.g. condensation on measuring element)



Do not touch the sensor elements!

Re-calibration or exchange of the sensor element are not subject of the general warranty.

» INFORMATION ABOUT SELF-CALIBRATION FEATURE CO2

All gas sensors are subject to drift. The degree of drift is dependent on the use of components and product design. In addition, the following environmental conditions, among others, can accelerate/ favor the aging and wear of the sensors:

- Mechanical stress (also due to temperature fluctuation)
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (high humidity / condensation on measuring element)

An internal self calibration function with dual channel technology compensates the caused drift. Thermokon sensors are for permanent use (e.g. hospitals).

» INFORMATION ABOUT INDOOR AIR QUALITY CO2

EN 13779 defines several classes for indoor air quality:

Category	CO ₂ content above the content in outdoor air in ppm		Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400.. 600 ppm	500 ppm	Standard indoor air quality
IDA3	600..1.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

» TECHNICAL DATA

Measuring values <i>(optional)</i>	temperature, optional humidity CO2
Network technology	Casambi (Evolution) 2,4 GHz
Power supply ¹	24 V = ($\pm 10\%$) or 24 V ~ ($\pm 10\%$) SELV <i>With alternating voltage, the correct polarity must be ensured.</i>
Power consumption	typ. 2 W (24 V =) 4 VA (24 V~)
Measuring range temp	0..+50 °C
Accuracy temperature	$\pm 0,5K$ (typ. at 21 °C)
Casambi functions	light ON/OFF/DIM, colour temperature, colour control RGBW, setup scenarios measured value display & history
Display	TFT 3,5", 320x240 px
Enclosure	PC V0, enclosure colour: pure white, black or aluminium, design cover pure white, black or aluminium
Protection	IP30 according to DIN EN 60529
Cable entry	rear entry, breaking points bottom, drill mark top
Connection electrical	tool-free mountable spring terminal, max. 1,5 mm ²
Ambient condition	0..+50 °C, max. 85% non-condensing
Mounting	surface mounted on flush-mounting box ($\varnothing=60$ mm) or to be mounted flat onto the surface using screws, base part can be mounted and wired separately

» Humidity (optional)

Measuring range humidity <i>(relative)</i>	0..100% rH
Accuracy humidity	$\pm 2\%$ between 10..90% rH (typ. at 21 °C)

» CO2 (optional)

Measuring range CO2	0..2000
Accuracy CO2	± 50 ppm +3 % of reading, typ. at 21 °C, 50% rH, 1015 hPa
Calibration	self-calibration dual channel
Sensor	NDIR (non-dispersive, infrared)
Display <i>(optional)</i>	Display backlight to indicate air quality (traffic light function "TLF")

» CONNECTION PLAN

Room operating unit – Casambi


Novos 7 Casambi

	— n.c.
	— n.c.
	— n.c.
	— n.c.
	— n.c.
	— GND ——— 0 V ⊥
	— UB+ ——— 24 V = ($\pm 10\%$) or 24 V ~ ($\pm 10\%$)

» MOUNTING ADVICES

Cable entry

There are predetermined breaking points for 2 optional cable entries on the underside of the base plate.

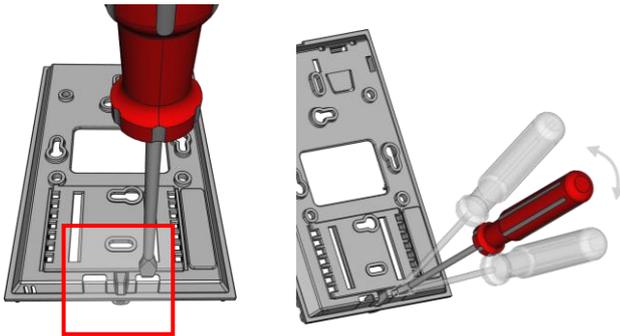

Please make sure that the device is de-energized if you want to install it!



The installation can be performed on the flat wall surface or on a flush-mounted box. A representative place should be selected. Sunshine and draft, e.g. in the installation tube should be avoided, so that the measurement result is not falsified. Seal the end of the installation tube.

- For wiring, the upper part of the device must be removed from the base plate. Base plate and upper part are detachably connected to each other by means of locking lugs.
- The mounting of the base plate on the flat wall surface is done with rawplugs and screws.
- Finally, the device is attached to the base plate and fixed with the screw.

Housing open / close

Snap the upper part of the housing into the locking lug on the upper side

Fix the upper part of the housing on the underside with the screw included in the delivery.

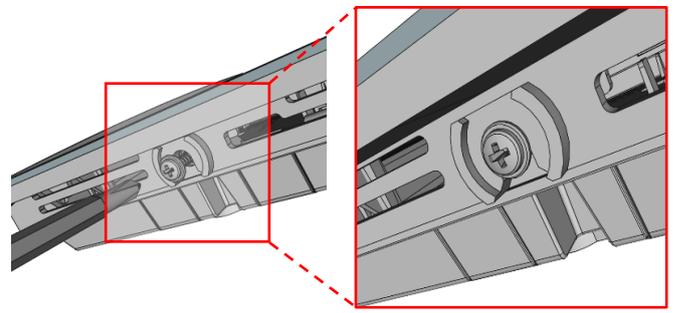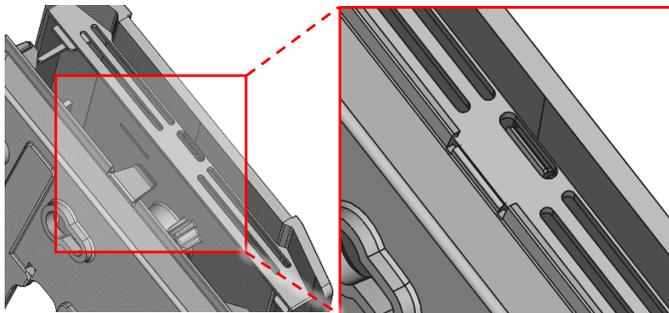

» CONFIGURATION

The configuration is performed in powered state. The following options are available for configuring the device:

Device connection	Casambi Communication
Configuration-adapter	<p>internal</p>
Configurations-software	<p>Smartphone/Tablet with CASAMBI App</p> <p><i>Parameterization with mobile device via bluetooth and CASAMBI App.</i></p>

» FUNCTIONAL DESCRIPTION - MAIN SCREEN NOVOS 7



Main screen
 The display on the main screen of the NOVOS room control unit can be freely parameterised. All icons and notifications can be switched ON and OFF. Set point can also be overwritten.

Headline
 In the header of the main screen, various icons can be shown or hidden as desired.

Date / time
 The time and date are in the center of the main screen.

Room temperature
 The current temperature in the room can be shown on the display.

Favourite buttons 2-5
 Below the edge of the screen, there are 4 freely parameterizable capacitive keys. The corresponding symbols are displayed in the footer of the main screen.

Rotary / push button (Favourite button 1)
 The push/turn control is used to navigate through the extensive submenus. In addition, a favorites function can be defined on the pushbutton.
 If the turn control is operated, the function submenu (Carousel) is called up.


» MENU OVERVIEW (CAROUSEL)

Headline
 equivalent to the functions, the corresponding symbol is displayed or changed.

Measured values
 Submenu for displaying internal or external measured values.

Display OFF
 Switches the display off. Pressing any key again activates the display.

Back button symbol
 Back to the main menu.

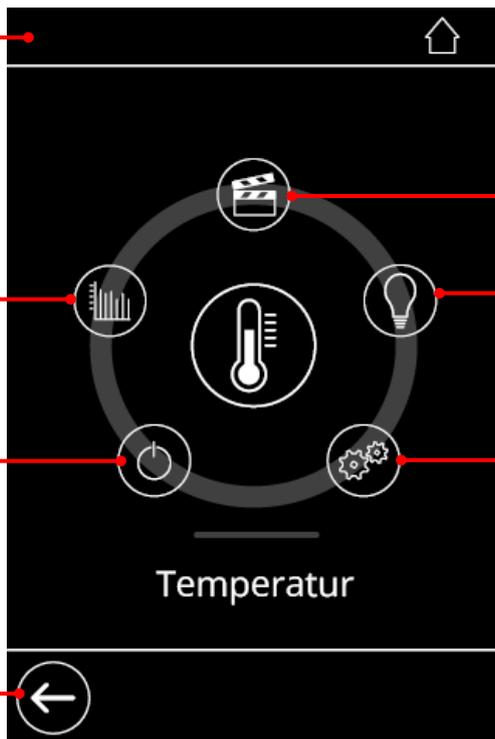


Scene
 For controlling up to 8 different scenes.

Light
 Control of up to 8 light circuits.


Settings
 Menu for various settings
 Default access password: 2030

» **CASAMBI COMISSIONING**

1. Connect the device to the power supply. Observe the connection diagram!
2. Open Casambi App (iOS App Store / Android Play Store)
If an unpaired device is found, it is suggested to add the device to a network.
3. Add NOVOS 7 to an existing Casambi network, is required switch to other Casambi network first.
After pressing the "back" button the network can be changed ("my networks").
4. The device appears in the gateway section.
5. Configure the NOVOS 7 Casambi parameters.

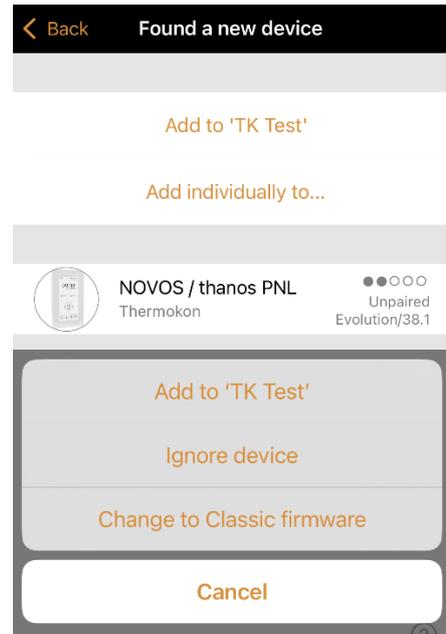


» **CASAMBI PARAMETER**

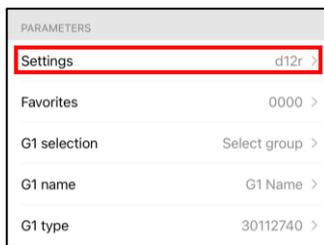

Settings (parameter LTBC)


- L = language**
D – german
E – english
X – no change
- T = Time synch**
0 – no time synch
1 – time synch from Casambi to device
- B = Behavior**
1 – external control (configurable via BUS)
2 – standalone/panel (configurable only via CASAMBI)
- C = display color scheme**
x background color / text color
0 no change
- B** black / white
W white / black
- G** green / white
L blue / white
- R** red / white

Example settings: d12l = german | time synch | standalone/panel | background color blue / text color white

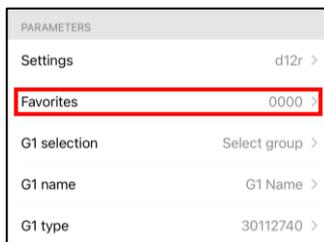

Favorites* (ABCDE)

- A favorite button 1
- B favorite button 2
- C favorite button 3
- D favorite button 4
- E favorite button 5
- Default value: 0 - none
- i.E.: 0b300
– none / scene 2 / group 3

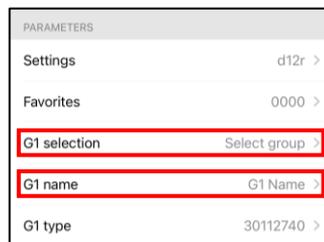


Gx selection / name
(Selection / Input field)

- Selection** – Casambi group
- Name** – group name

Favorites

1 Group 1	a Scene 1	i Presence	q shading 1
2 Group 2	b Scene 2	j Eco	r shading 2
3 Group 3	c Scene 3	k Climate menu	s shading 3
4 Group 4	d Scene 4	l Lighting menu	t shading 4
5 Group 5	e Scene 5	m Blind menu	u shading 5
6 Group 6	f Scene 6	n Scene menu	v shading 6
7 Group 7	g Scene 7	o Monitoring menu	w shading 7
8 Group 8	h Scene 8	p fan menu (Novos 7)	x shading 8

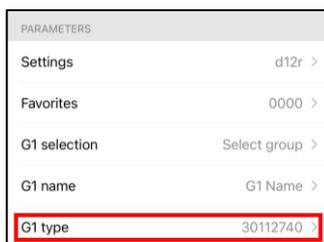

Gx type
(Light group configuration)

- ITDSMnMx
- I – Icon
- T – Type
- D – Dim function
- S – Step size
- Mn / Mx – minimum / maximum Color temperature



Scene symbol
(Scene symbol configuration)*
1. digit = scene symbol 1
2. digit = scene symbol 2...

Sx selection / name
(Selection / Input field)

- Selection** – scene
- Name** – scene name

Gx Type parameter listing

I	0 – universal, 1 – spot, 2 – cassette, 3 – floor lamp (default)
T	0 – slider (default), 1 – RGBW colourpicker, 2 – colour temperature picker
D	0 – not dimmable, 1 – dimmable (default)
S	0 – 1, 1 – 1 (default), 2 – 2, 3 – 3, 4 – 4, 5 – 5, 6 – 10, 7 – 15, 8 – 20 (in %)
Mn	Input value (2 digits) multiplied with 100 = minimum kelvin (Color Temperature) (i.E.: Mn = 27 -> CTmin = 27 * 100 = 2700K (default))
Mx	Input value (2 digits) multiplied with 100 = maximum kelvin (Color Temperature) (i.E.: Mx = 40 -> CTmax = 40 * 100 = 4000K (default))


Example Gx Type: 30112740 = floor lamp | slider | dimmable | 1 | min kelvin color temp 2700k | max kelvin color temp 4000k

Scenen symbol parameter listing

0	work (briefcase)
1	presentation (canvas)
2	cinema (screen)
3	party (cocktail glass)
4	bedroom (bed)
5	food (serving bell)
6	do not disturb (lock)
7	cleaning (vaccum cleaner)
8	scene (clapperboard)

Example scene symbol: 02437000 = scene 1: work | scene 2: cinema | scene 3: bedroom | scene 4: party | scene 5: cleaning

» DIMENSIONS (MM)

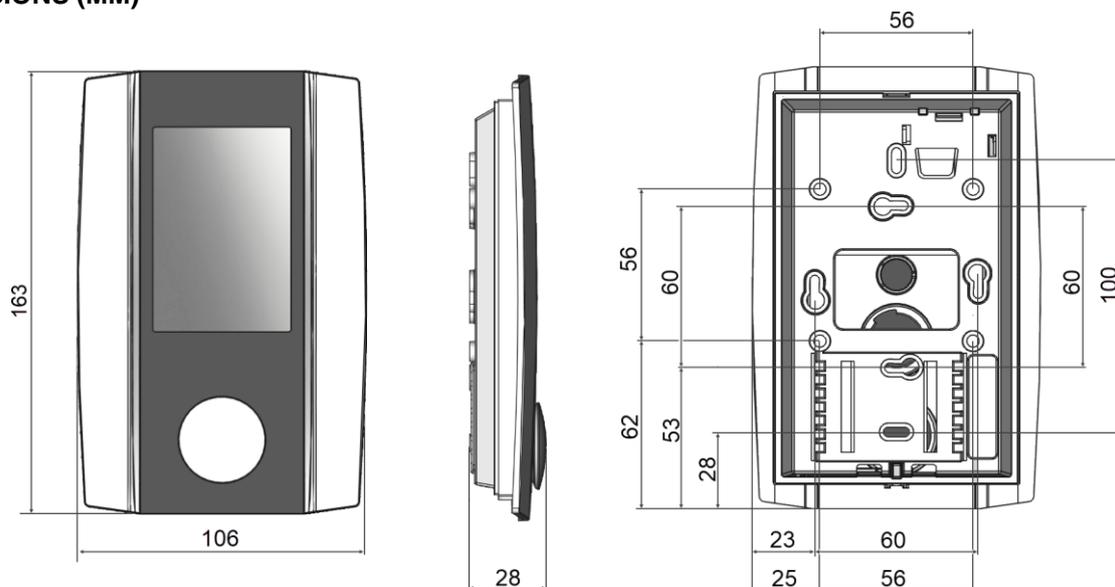

» ACCESSORIES (OPTIONAL)

Rawplugs and screws (2 pcs. each)
 PSU-UP24 – flush mount power supply 24 V (AC Input: 100..240 V ~ | DC Output 24 V = 0,5 A)

Item No. 102209
 Item No. 645737