


# VFG54 LCD

Contact temperature sensor

**thermokon**  
Sensortechnik GmbH

## Datasheet

Subject to technical alteration  
Issue date: 7/14/2015

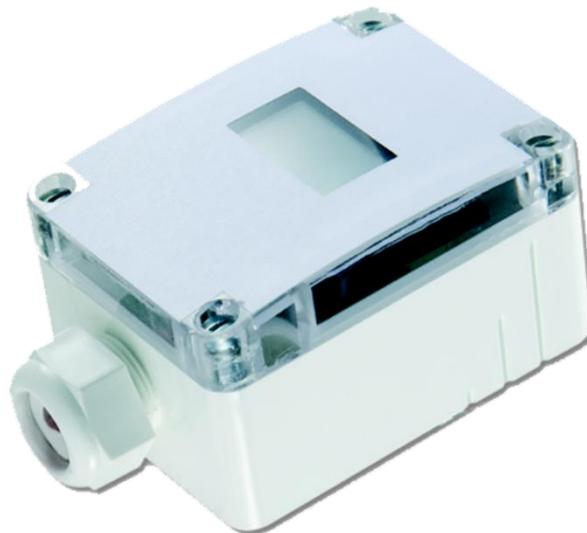

## Application

Contact temperature sensor for measuring temperature on pipes and arched surfaces. Designed for control and monitoring systems.

## Types Available

VFG54 LCD TRV	active, 0..10 V <sup>*</sup>
VFG54 LCD TRA	active, 4..20 mA <sup>*</sup>

<sup>\*</sup> Measuring ranges adjustable at the transducer

## Security Advice – Caution



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorized modifications are prohibited! The product must not be used in relation with any equipment that in case of failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual



## Notes on Disposal

As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most the product may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

## Build-up of Self-Heating by Electrical Dissipative Power

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ( $\pm 0,2$  V) this is normally done by adding or reducing a constant offset value. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers 0..10 V / 4..20 mA have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board.

**Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.**


## Technical Data

Measuring values	Temperature
Output voltage	TRV: 0..10 V, min. load 5 k $\Omega$
Output Amp	TRA: 4..20 mA, max. load 500 $\Omega$ (24 V =)
Power supply	TRV: 15..24 V = ( $\pm 10\%$ ) or 24 V ~ ( $\pm 10\%$ ) TRA: 15..24 V = ( $\pm 10\%$ )
Power consumption	TRV: typ. 0.42 W (24 V =)   0.84 VA (24 V ~) TRA: max. 20 mA (24 V =)
Measuring range temperature	TRV/TRA: adjustable at the transducer TRV1/TRA1 -58..+122 °F TRV2/TRA2 +14..+248 °F TRV3/TRA3 +32..+122 °F TRV4/TRA4 +32..+302 °F TRV8/TRA8 +5.. +95 °F
Accuracy temperature	$\pm 1\%$ of measuring range (typ. at 70 °F)
Display	LCD 34x21 mm, black/white with backlight white
Enclosure	PA6, pure white, cover PC, transparent, with quick lock screws
Protection	NEMA1
Cable entry	M20 for wire max. $\varnothing=0.31$ in.
Connection electrical	terminal block 15 AWG, 3-wire
Pocket	brass, sprung sensor contact
Ambient condition	enclosure TRV/TRA: -31..+158 °F, max. 85% rH short term condensation
Weight	4.23 oz.

## Mounting Advices

The device is fixed using the tightening strap. **Use contact fluid for better heat transfer between sensor and measuring medium.**

To avoid permeation of condensate, mount the sensor on top of the tube, if possible.

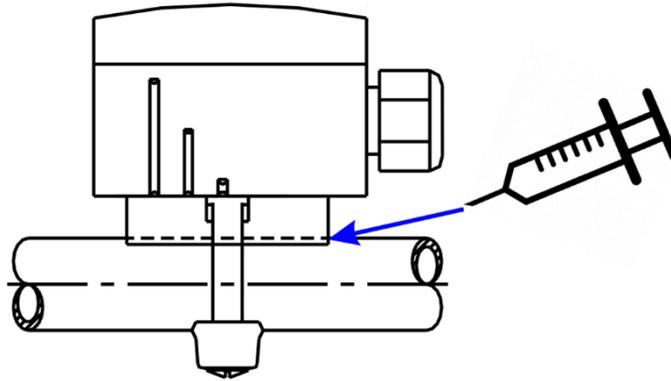


## Terminal Connection Plan

### Measuring range adjustment

- 58..+122 °F
- +14..+120 °F
- +32.. +50 °F
- +32..+160 °F
- +5.. +35 °F

### Display

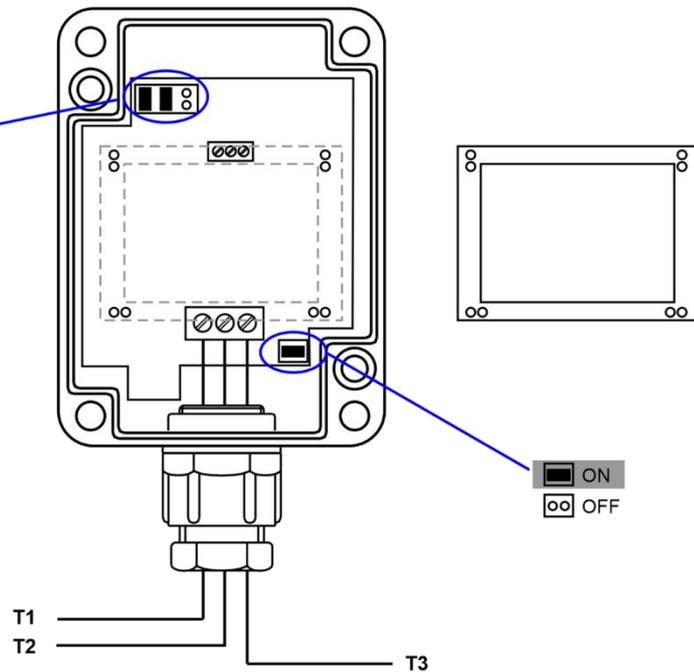


### Display background illumination

Note: Remove display from the board before connecting wires.

connections	
T1	+ 15..24 V =   24 V ~
T2	GND
T3	output 0..10 V   4..20 mA

**Dimensions (in.)**

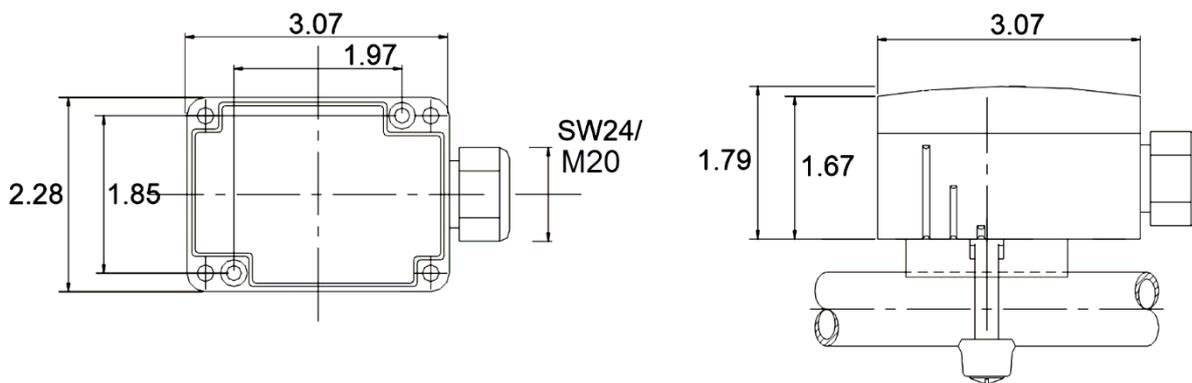

**Accessories**

- |  |                 |
|--|-----------------|
| Tightening strap 2" with contact fluid     | Item No. 102254 |
| Tightening strap 900 mm with contact fluid | Item No. 102315 |